


ARMANI / **Roca**

248243 248270

248244 248271

248262 248272

248263 248273

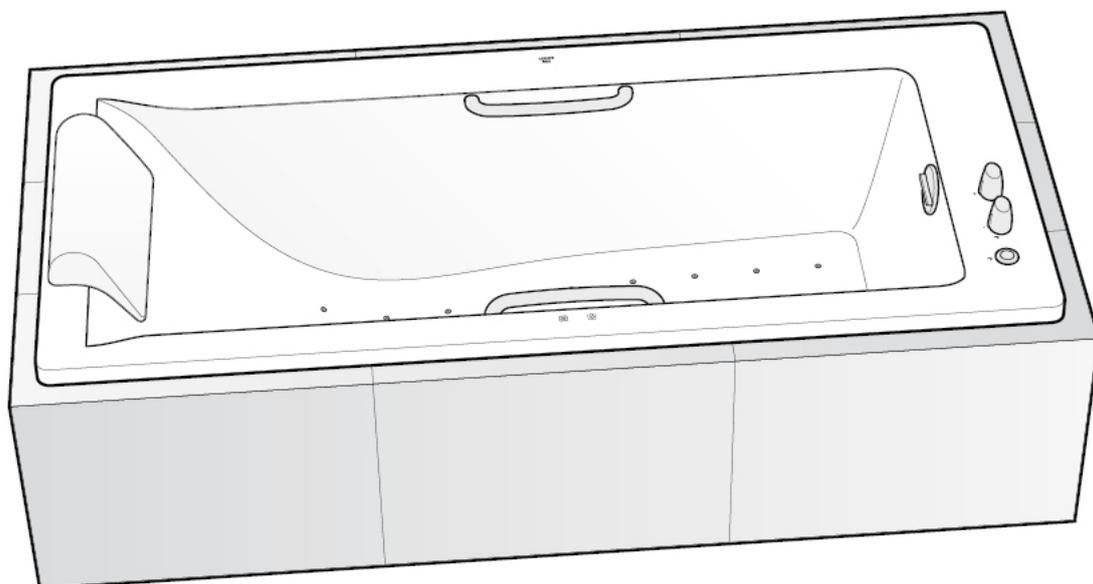

General comments	3
■ Effects of massage	3
■ Precautions	3
■ Maintenance	3
Description	4
■ Specifications	4
Tap fitting	5
■ Selector	5
■ Thermostatic mixer fitting	5
■ Waste	5
■ Handshower	5
Functions	6
■ Chromotherapy 	6
■ Blow 	7
Maintenance	8

We congratulate you and thank you for purchasing this Roca product, which has been designed, manufactured and checked by our technical staff.

This product must be installed by qualified personnel, in according with the national current regulation.


Effects of massage

The action of the air bubbles on the body has been proven to be highly beneficial for the health. The following effects are particularly worth mentioning:

- Stimulates and improves skin hygiene and cardiovascular circulation.
- Generally improves capillary and lymph circulation.
- Tones the muscles and oxygenates the skin.
- Particularly indicated in cases of muscle pain, lumbago, arthritis, post-operative convalescence, stress and fatigue in general.

Precautions


- This device is not intended to be used by people (including children) whose physical, sensory or mental capabilities are reduced, or no experience or knowledge, unless they have supervision or instructions concerning the use of the apparatus by a person responsible for security.
- Children should be supervised to ensure they do not play with the device.
- In spite of the preventive and relaxing therapeutic effects of hydro-massage, it is important to note that in the case of acute conditions, uncompensated heart disease, serious hypertension or certain infectious diseases, and in the case of certain groups (children, the elderly, and pregnant women), certain special conditions regarding bath duration, temperature and frequency must be borne in mind. In these situations it is advisable to consult your doctor first.
- It is recommended not to take a bath directly after drinking alcohol or having a meal.
- Use only water from your home network properly treated and disinfected.
- If the water hardness of the installation is very high, it is advisable to install a water softener to guarantee that the whirlpool equipment is working properly.
- Do not use foam-bath products with the whirlpool since the amount of foam produced could lead to overflows.

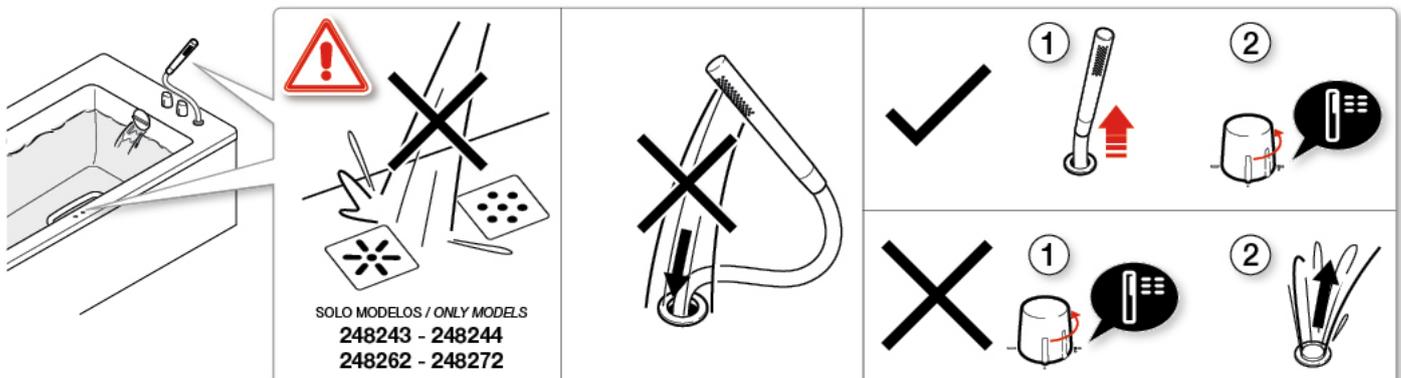




Maintenance

- To be adjusted (repaired) only by installers who can demonstrate to the appropriate authorities awareness and competence in the application of National Regulatory requirements for safety, i.e. electrical and water supply/disposal.


Description

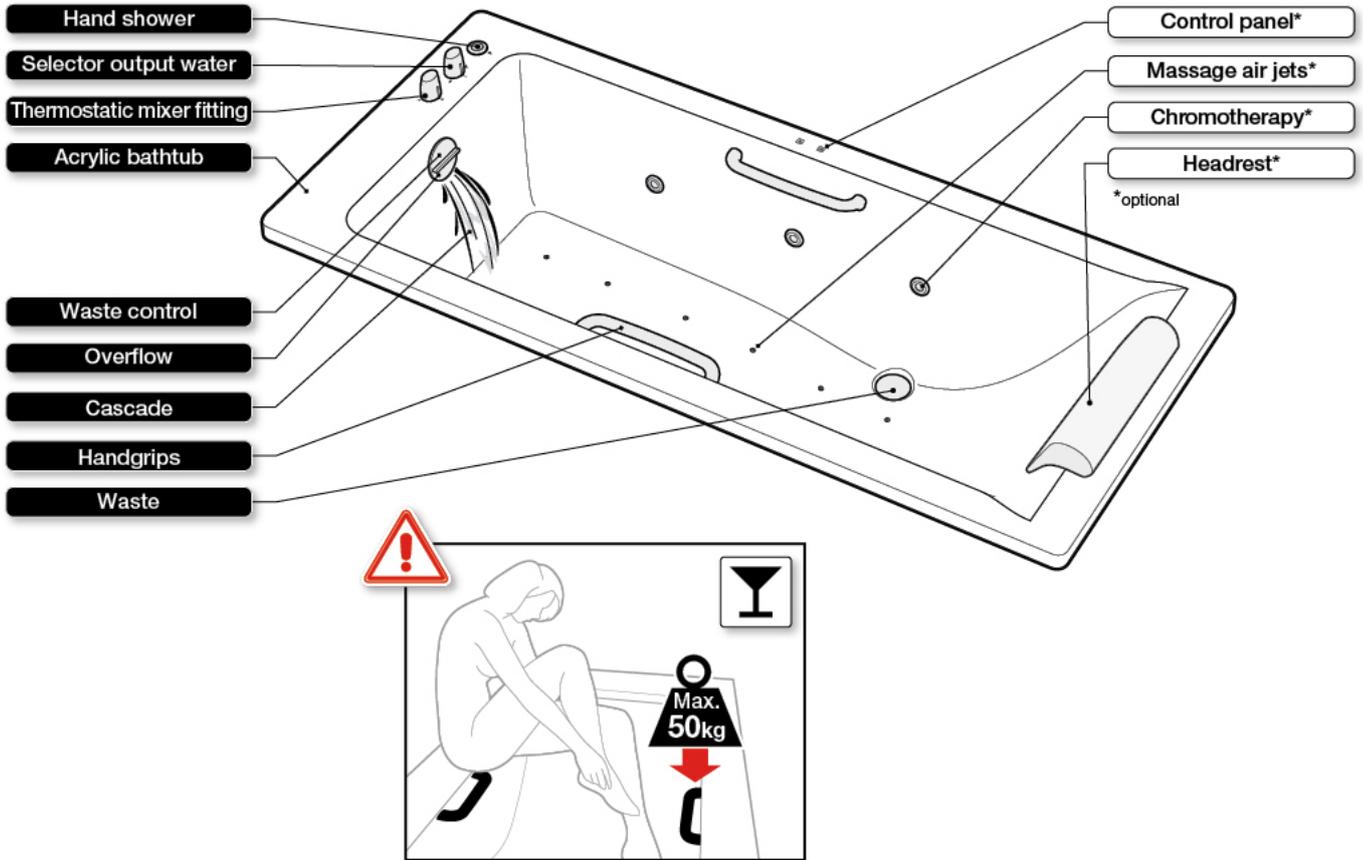


Specifications

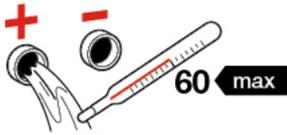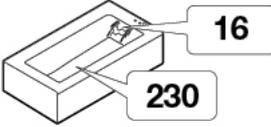 P	bar (MPa)		
 T	°C		
 Q (3 bar)	l/min		
 E	kcal/h		


■ Selector

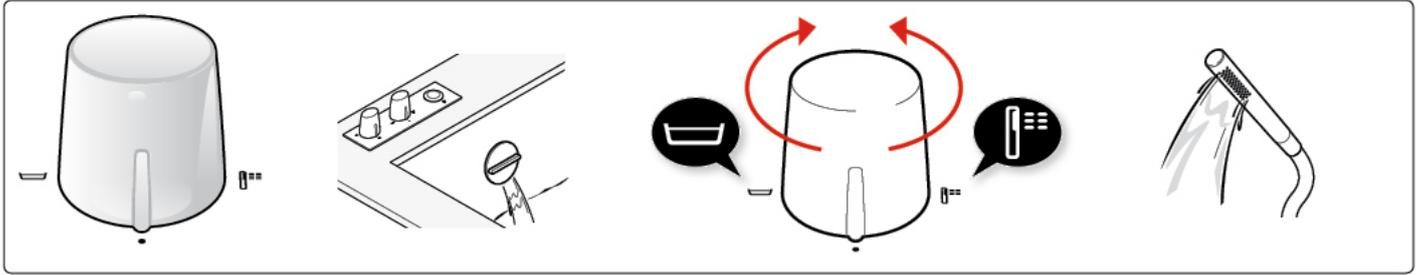


■ Thermostatic mixer fitting

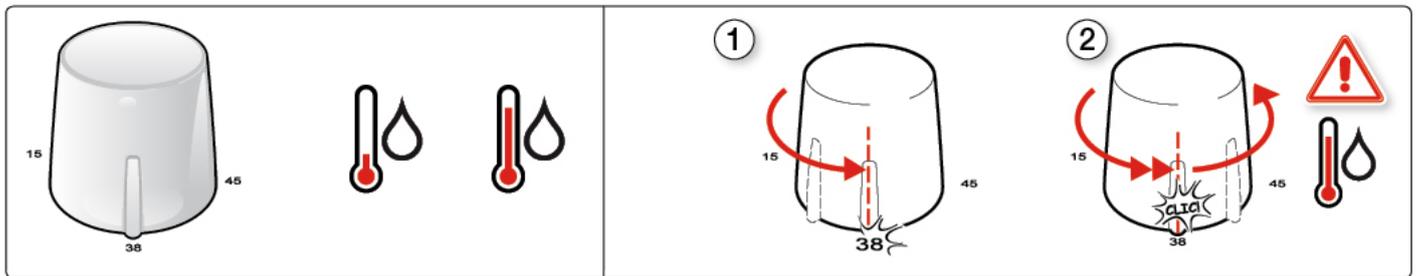

■ Waste

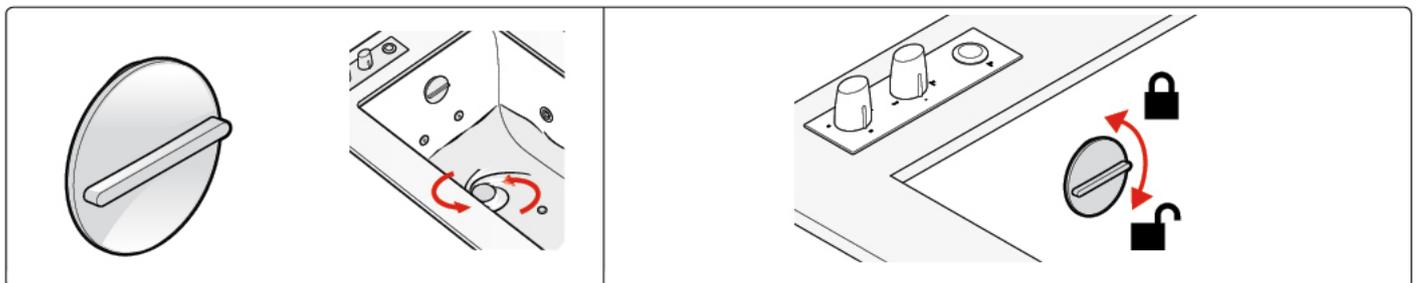


■ Handshower

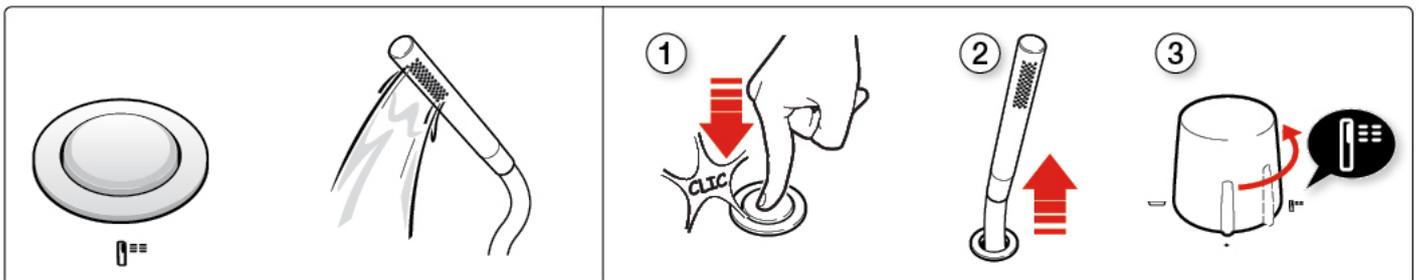


Functions

■ Chromotherapy

It is a treatment that uses light and colour inducing relaxation or stimulation in the body.

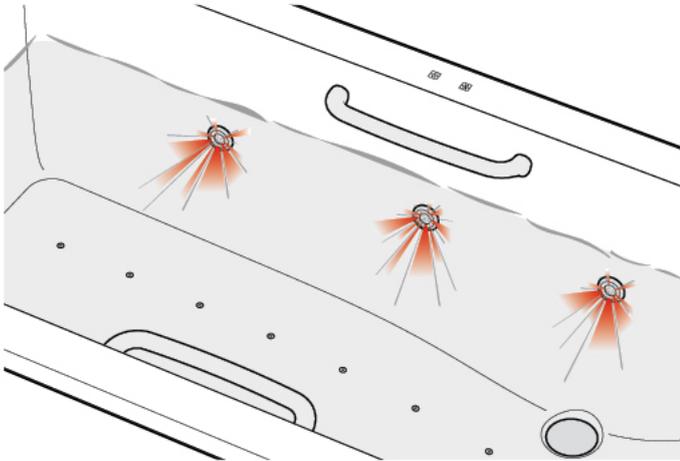


Colour use and description	
1	White Represents purity and light of day. Transmits warmth and transparency.
2	Red Primary colour warm, stimulating in distress and physical states of weakness in the body.
3	Blue Primary colour cold temperament. It has sedative and tranquilizing.
4	Yellow Synonym of light. It brings optimism, vitality, joy and enthusiasm for life.
5	Green It has effects on the mental balance, reassuring. Not for nothing is the colour of nature.
6	"Soft" Program Sequence of soft colours with a relaxing effect.

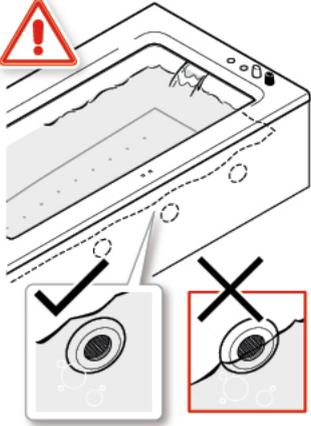①

ON



②

1 WHITE

2 RED


3 BLUE

4 YELLOW

5 GREEN


☀ ☀ ☀

6 "SOFT"

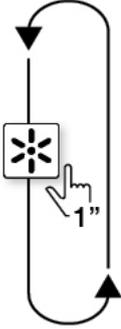


③


OFF



Blow


During the bath you can enjoy with Blow function, an air massage produced by small air bubbles rising from the holes in the bottom of the bathtub.

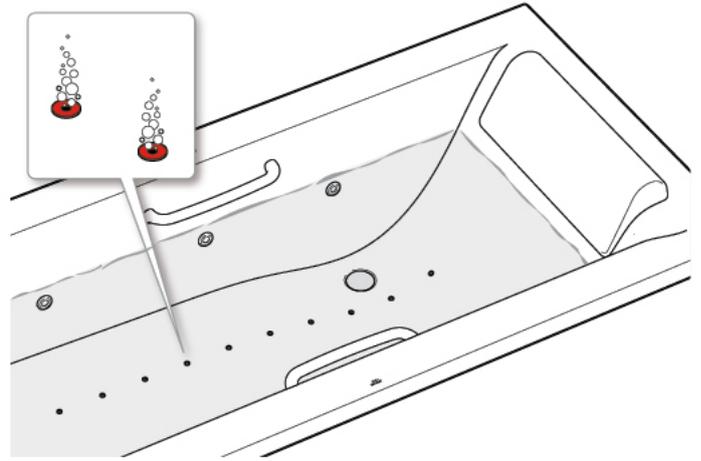


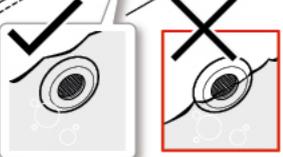



①

ON




②




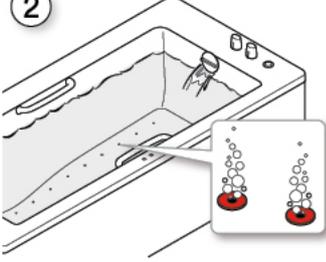




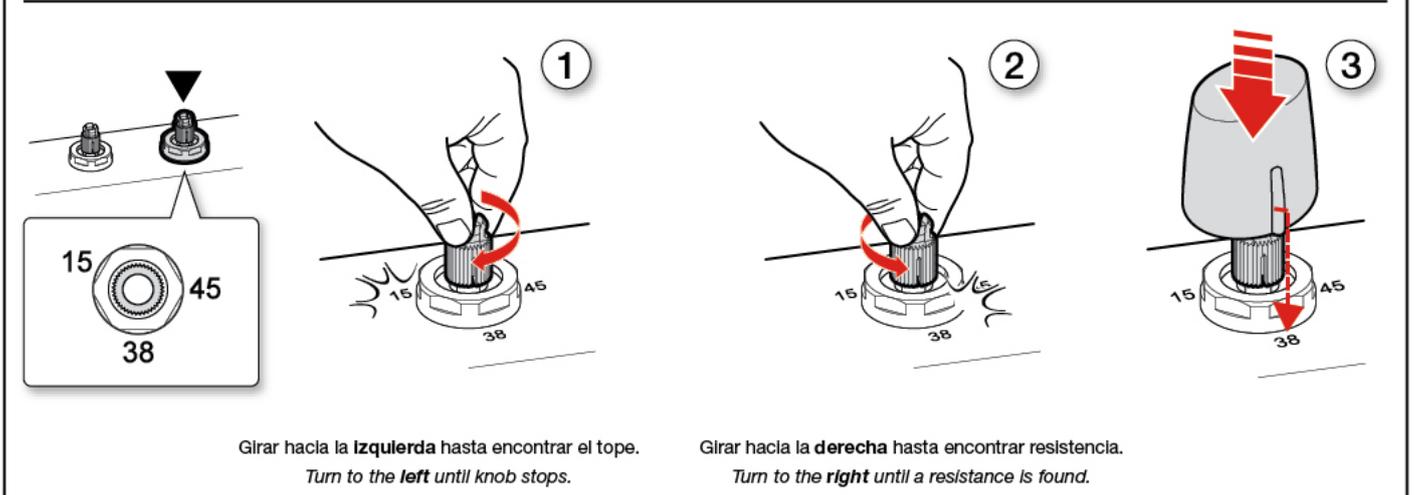
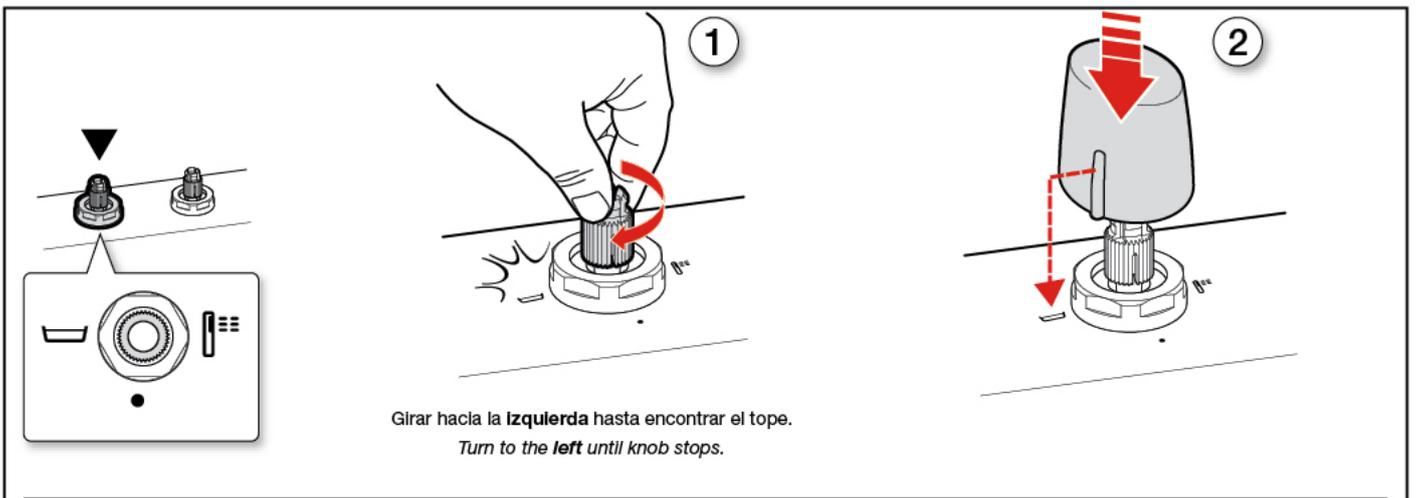
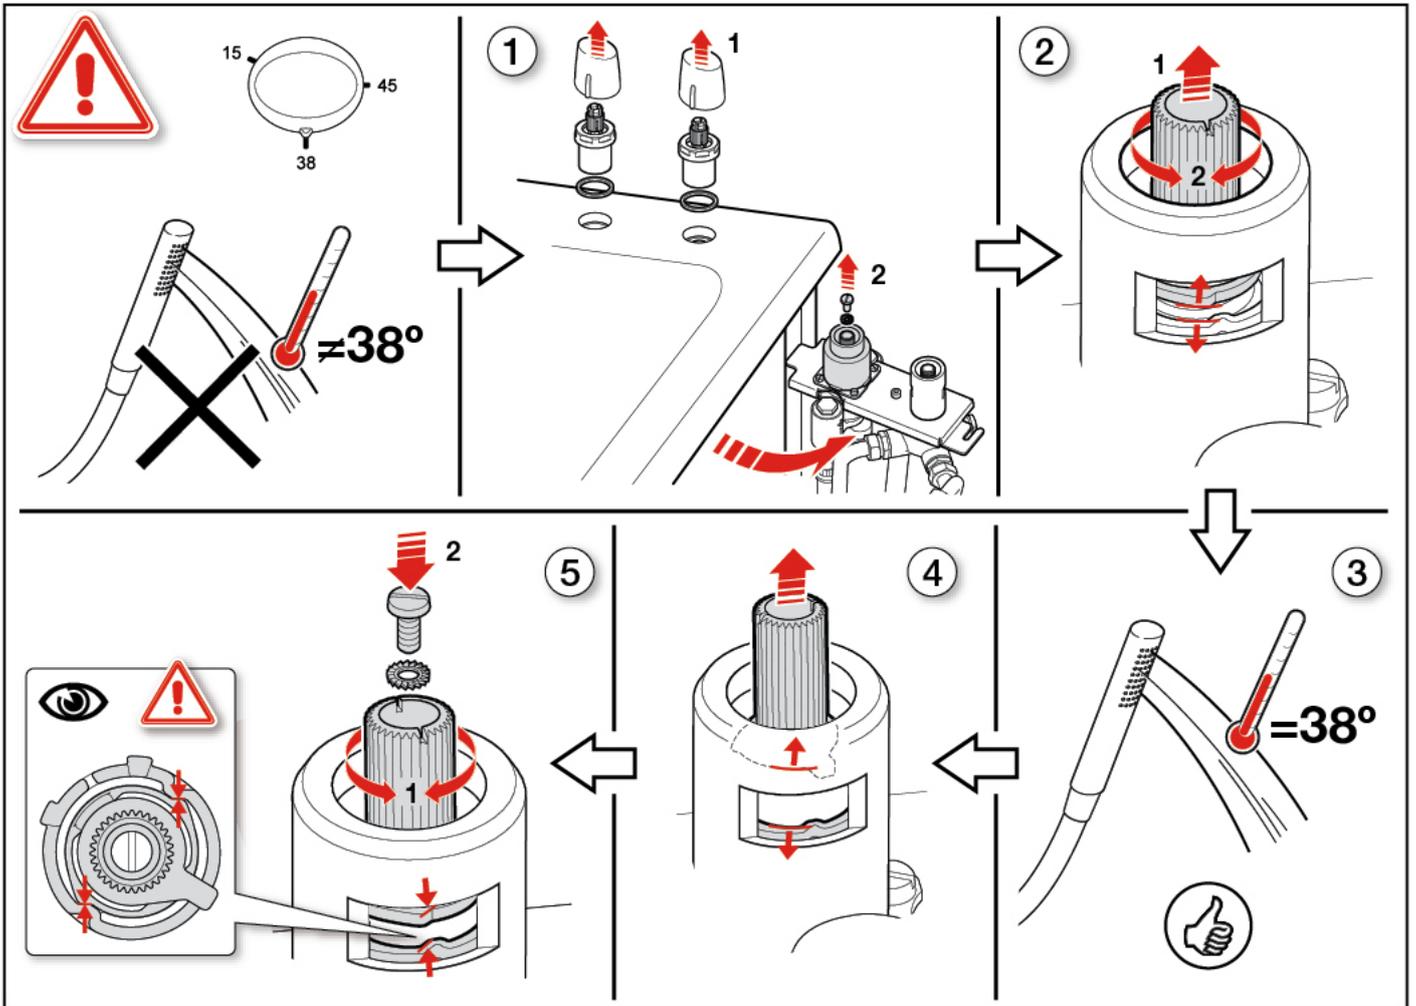
③

OFF (MANUAL)




Maintenance

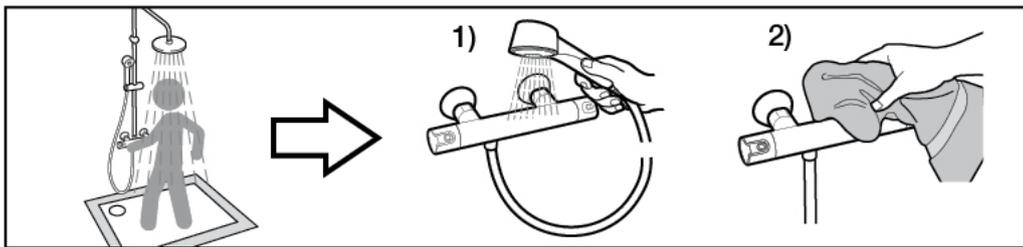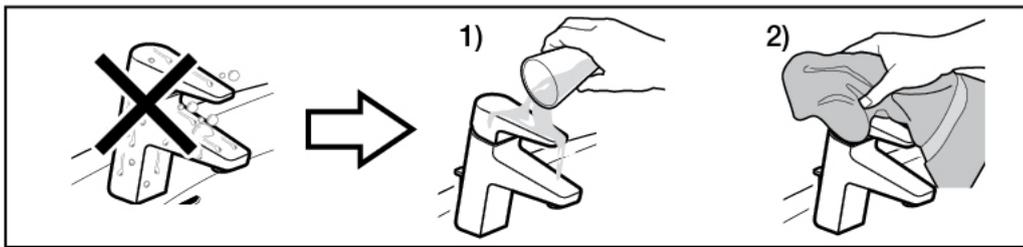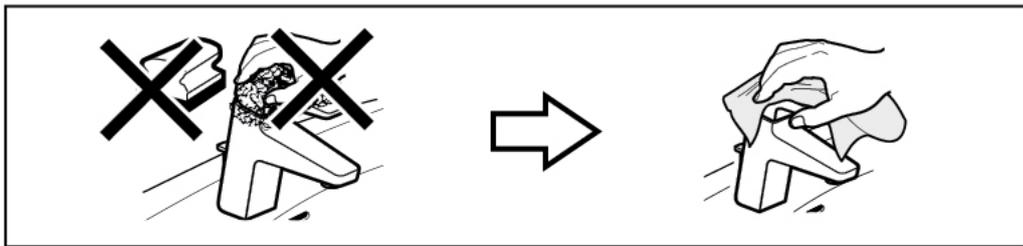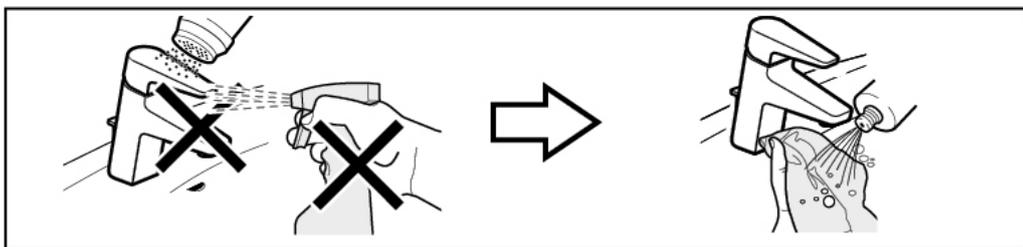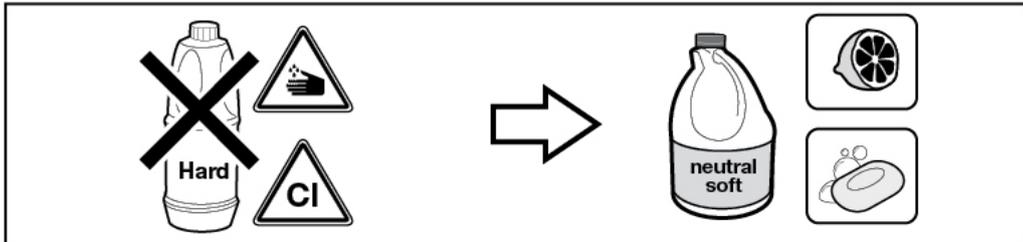



		1	2	3	4	5
6	7	8	9	10	11	12
13	14	15	16	17	18	19
20	21	22	23	24	25	26
27	28	29	30			

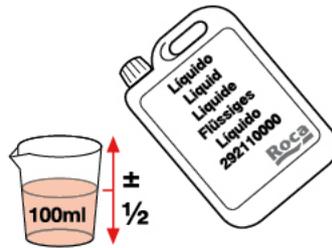

Disinfectant liquid

1

2

3

4

ON

5

2'

6

OFF

7

20'

8

1

2

17

x2



Roca Sanitario, S.A.
Avda. Diagonal, 513
08029 Barcelona
SPAIN
www.roca.com

**902
304
848** 
LÍNEA DE
ATENCIÓN AL
CONSUMIDOR
ESPAÑA

**902
400
423** 
SERVICIO
TÉCNICO
ESPAÑA


productsupport@roca.net
soporteproducto@roca.net